





## Wheel Clamp Instructions

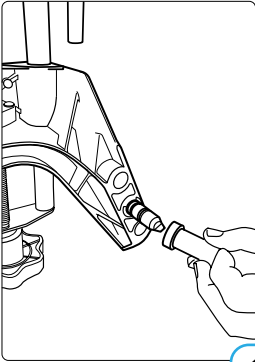



Remove plastic covers.

1

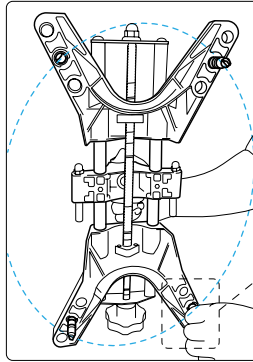


Adjust clamp legs with hook side facing inwards (where wheel would be).

2

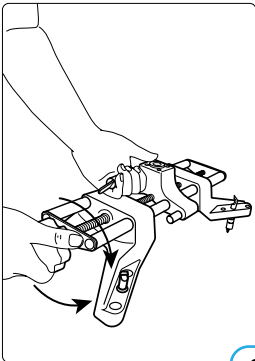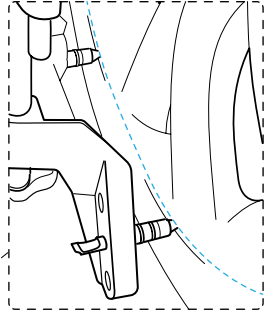


Adjust clamp length to be slightly longer than rim.

3

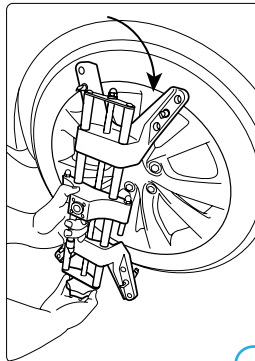


Place top clamp hooks over top lid of rim.

4

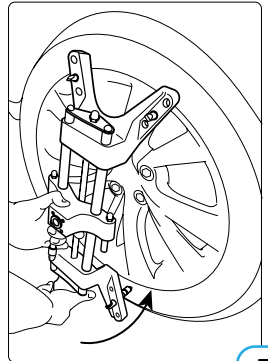

Tighten clamp so bottom clamp hooks grip bottom lip of rim.

5

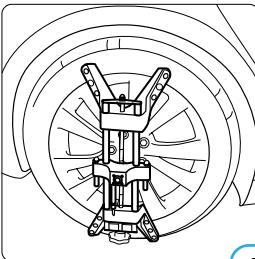

Wheel clamp is attached.

5

[www.zackmanscientific.com](http://www.zackmanscientific.com)



[support@zackmanscientific.com](mailto:support@zackmanscientific.com)



1 (415) 849- 0275






## Additional Instructions




### Mounting Adapter Plate

Rotate spindle counterclockwise to loosen adapter plate lock. Insert adapter plate and tighten spindle by rotating clockwise.

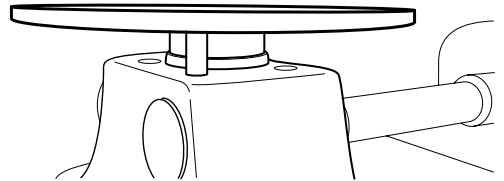

### Loosen or Tighten Plate

*Note:* Ensure the adapter plate's protruding metal piece is inserted in one of the four slots near the bore hole.

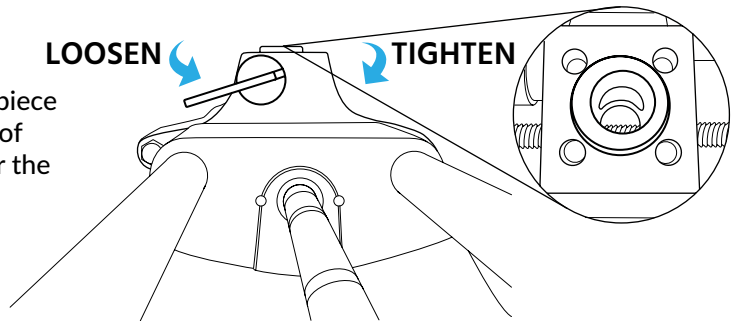

### Install Knob

Insert knob into rotary handle by placing the hex nut from the knob behind the screw hole and screw in the knob into the hex nut.

